






















# Basic	1
# Advanced	1
# Setup & Monitor	2
# Trace	2
# Tool	3
# IO	3


ComilDE

 
Basic

-  Home Return
-  SingleAxis
-  MultiAxis
-  IxLine
-  IxArc
-  IxSpline
-  IxHelical
-  PT Motion
-  IxMprLin2x
-  IxVia
-  Master-Slave

Advanced

-  ListMotion
-  CMP
-  CMP AB
-  Velocity / Torque
-  Auto Torque
-  Multi Torque
-  Gantry
-  2D Position Correction
-  Collision Avoidance
-  LATCH

- 

Register Trace
trace
- 

Motor Performance Trace
trace

Tool

- 


Shell
Shell Api , , logging
- 


Install (Installer)
Driver, Library
- 


DLLs (Dll finder)
Load DLL
- 


PC (PC Monitor)
PC , , Threshold
- 


M.Edit : Motion Editor
Shell Task Motion
- 

Servo : ServoTunes
- 

FW (Firmware Downloader)
Firmware Download, Updaloa, Compare
- 


Config
EtherCAT Configurator
- 


SlaveRW
EtherCAT Slave SDO, Register, EEPROM Read, Writer, Update
- 


Alarm History
EtherCAT Driver Alarm
- 


PDO (PDO Editor)
EtherCAT Driver Config PDO Data Read / Write


IO


- 


Digital Input
- 


Digital Output
- 

Analog Input
- 

Analog Output
- 

Counter
- 

Serial
- 

Custom DI
DI channel
- 

Custom DO
DI channel

¹⁾

Firmware, Driver(WDM), Library(DLL)

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/application:comiide:20_intro:20_ide_feature?rev=1559017894Last update: **2019/05/28 13:31**