

Intro	1
Logging	1
Interval	3
LogType	4

LogMode

× API

LogMode

.

Intro

- LogMoed API Stop API , 1)
- 'Log' LogMode .
- / .

Shell

> log

LOG> list

Clear

Open

API

F3

Exit

ToMem

ToQueue

Stop

Save

Load

Interval

MicroSec (Micro)

MiliSec (Mili)

QueueSize


MemSize (BufSize / BufferSize)

FolderSize (DirSize)

LOG> |

Logging

- API
- ' ; ' API
- out type parameter "null" , logging
- parameter "Invalid parameter" , logging
"Logging Start"

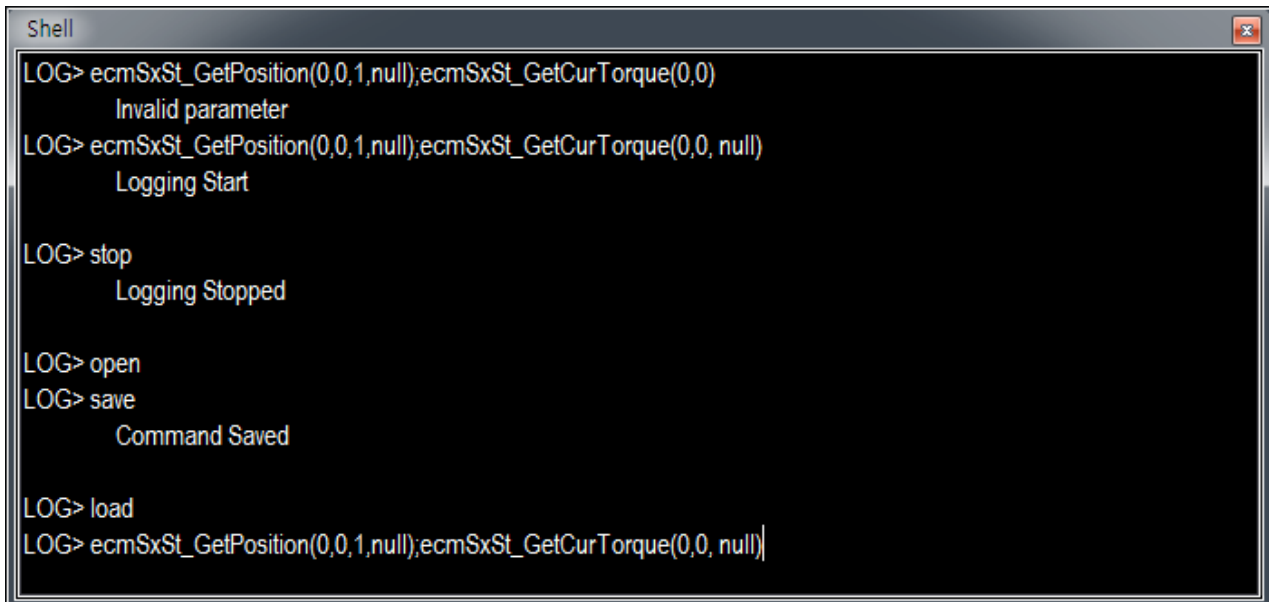

```

Shell
LOG> ecmSxSt_GetPosition(0,0,1,null);ecmSxSt_GetCurTorque(0,0)
      Invalid parameter
LOG> ecmSxSt_GetPosition(0,0,1,null);ecmSxSt_GetCurTorque(0,0, null)
      Logging Start

LOG> stop
      Logging Stopped


LOG> open
LOG> save
      Command Saved

LOG> load
LOG> ecmSxSt_GetPosition(0,0,1,null);ecmSxSt_GetCurTorque(0,0, null)|
  
```

```


LOG> stop
LOG> open
LOG> save
LOG> load
  
```

- stop : logging "Logging Stopped"
- open : logFile
- save :
- load :

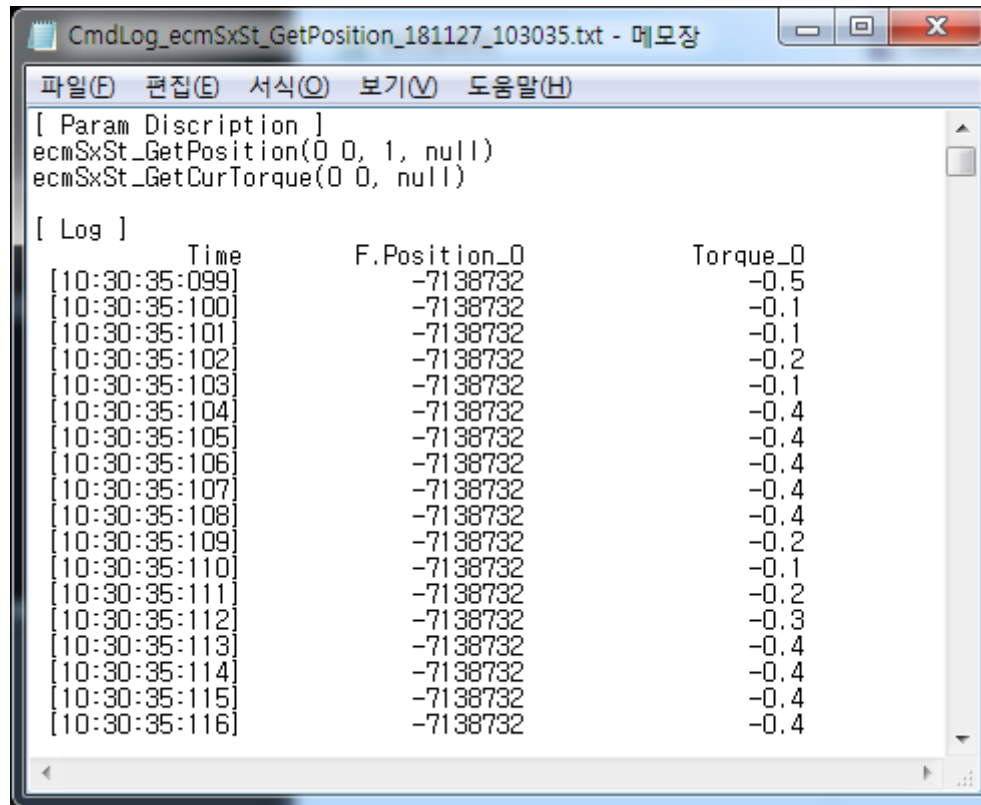

Interval

- Logging

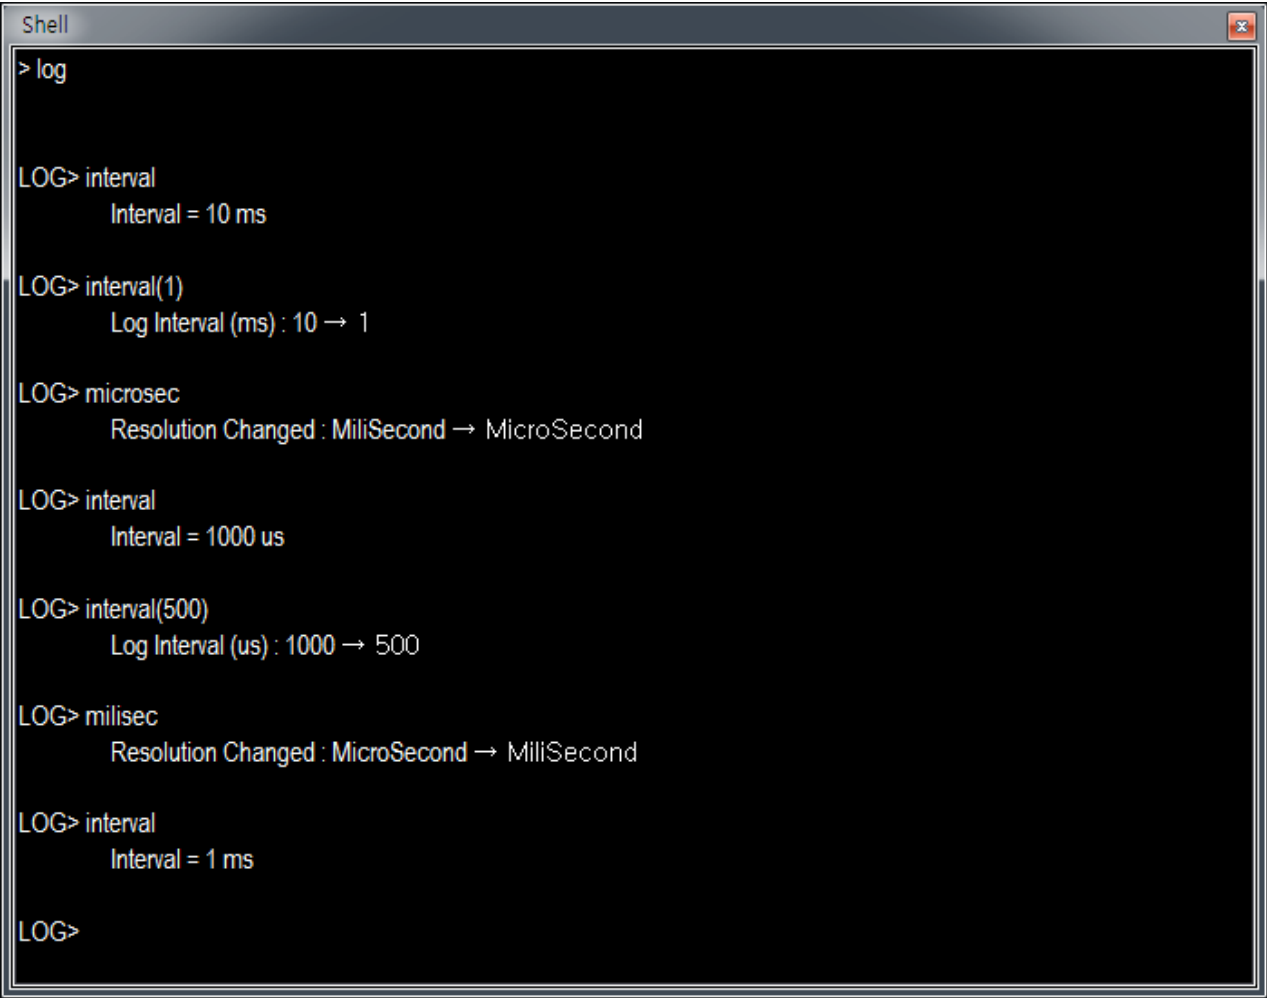


```
LOG> interval
LOG> interval(1)
LOG> microsec
LOG> interval
LOG> interval(500)
LOG> milisec
```

- interval : log 10ms
- interval(1) : log 1ms
- microsec : log us
- intervala : microsec milisec
- interval(500) : microsec microsec 가

× logging pc
, microsec pc

LogType

- Memory Queue .

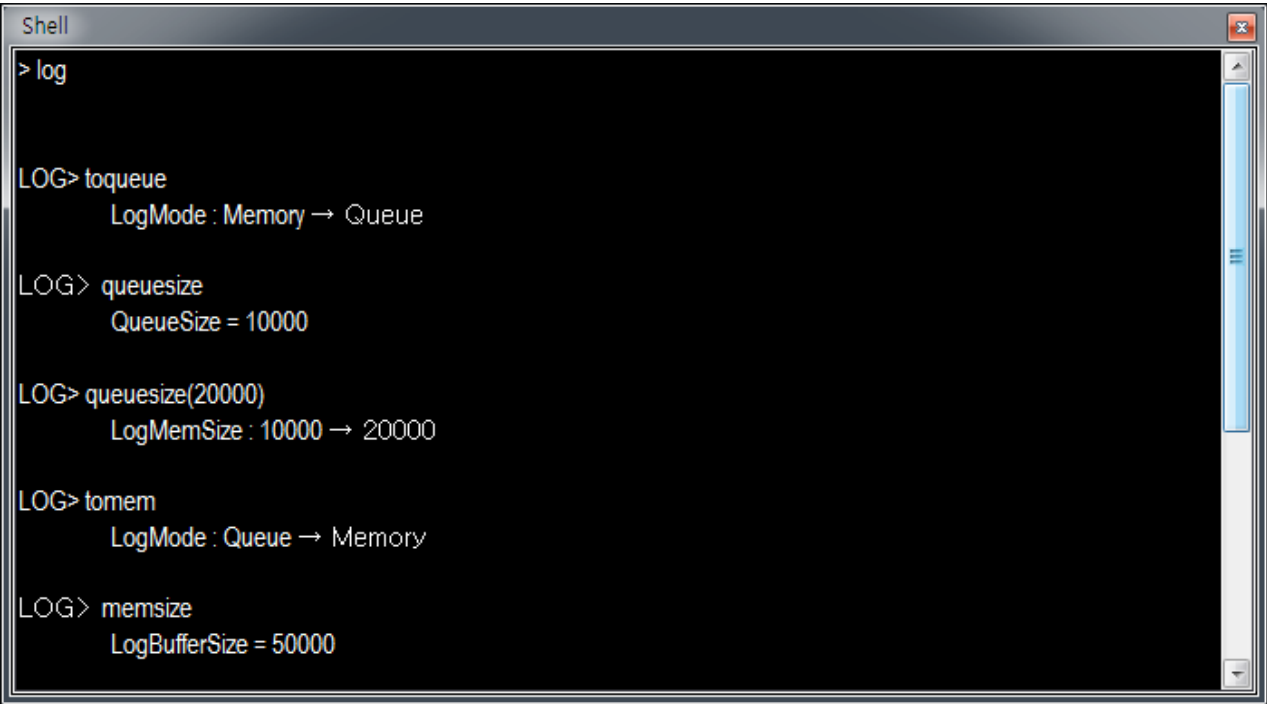

Memory

- MemSize Memory .
- , Stop .

Queue

- QueueSize , stop .

```
LOG> toqueue  
LOG> quesize  
LOG> quesize(20000)  
LOG> tomem  
LOG> memsize  
LOG> memsize(20000)
```

- toqueue : Queue .
- quesize : queueSize . line .
- quesize(20000) : quesize 20000 .
- tomem : Memory . Shell .
- memsize : MemorySize . line .
- memsize(20000) : MemorySize 20000 .

1)

Return out

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/doku.php?id=application:comiide:tool:shell:shell_logmode&rev=1543282446

Last update: **2024/07/08 18:23**