


.....	1
.....	1

RunTime Mode

× RunTime Mode
API

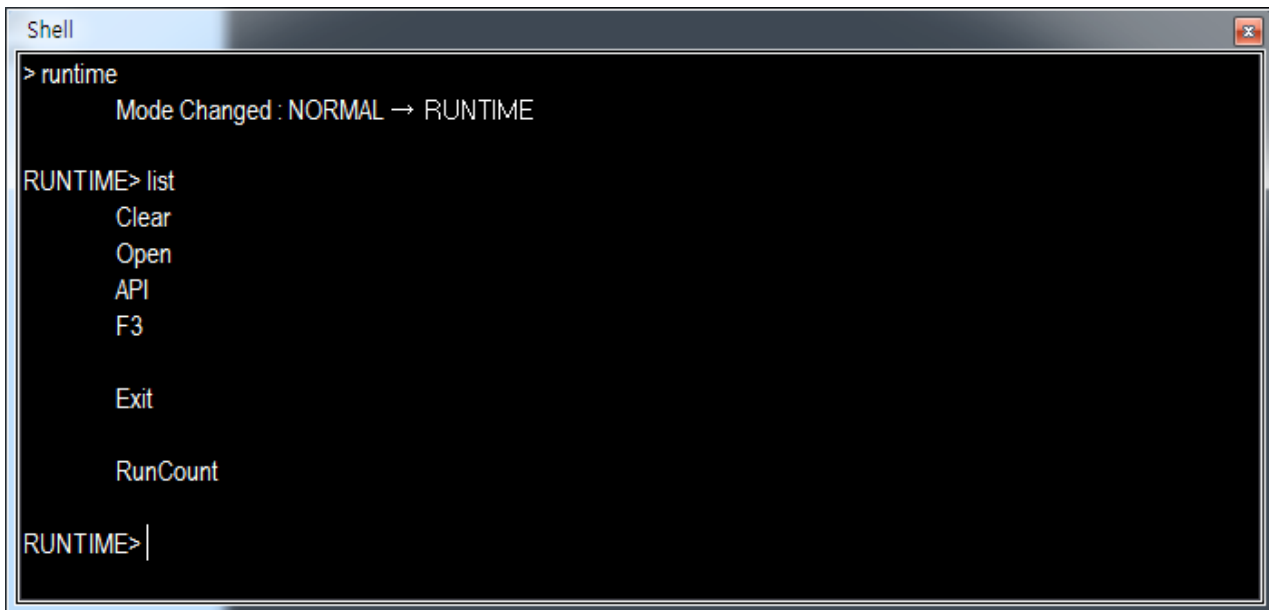

```
Shell
> runtime
    Mode Changed : NORMAL → RUNTIME


RUNTIME> list
    Clear
    Open
    API
    F3

    Exit

    RunCount

RUNTIME> |
```


- RunTime Mode api , .

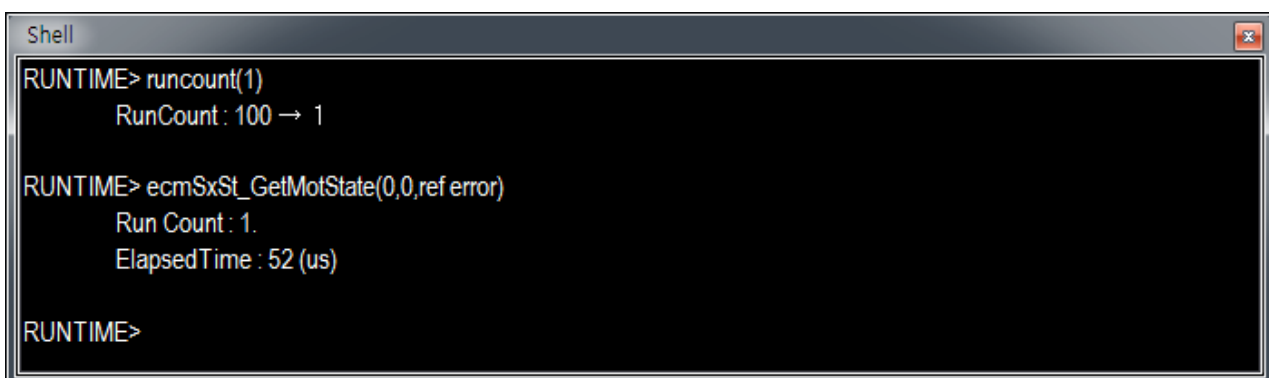

```
Shell
RUNTIME> runcount(1)
    RunCount : 100 → 1

RUNTIME> ecmSxSt_GetMotState(0,0,ref error)
    Run Count : 1.
    ElapsedTime : 52 (us)

RUNTIME>
```

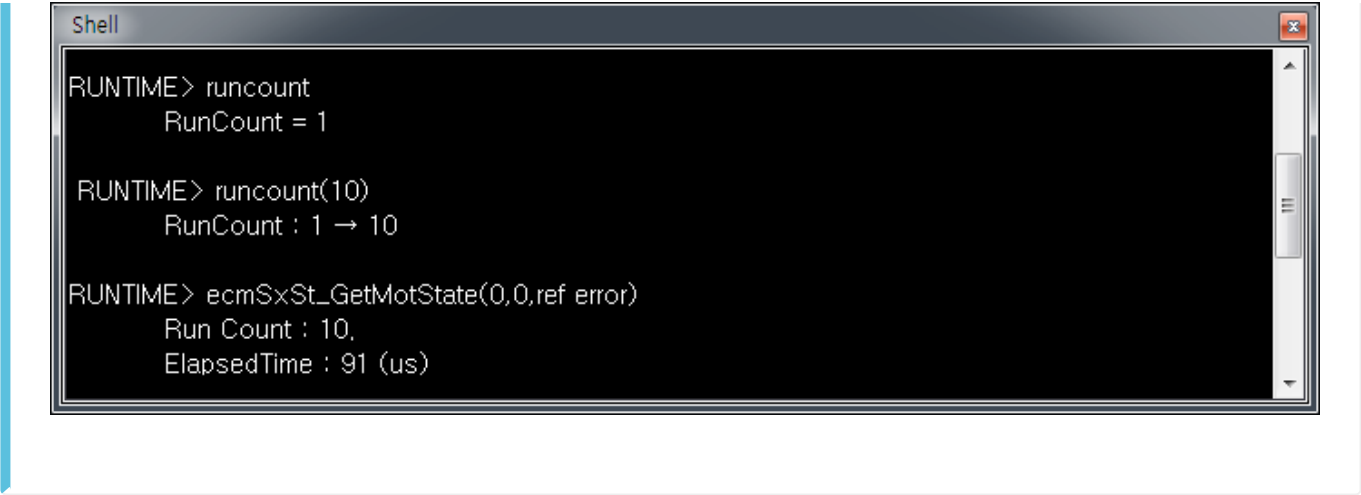

RUNTIME> runcount
RUNTIME> runcount(10)

- RunCount : .
- RunCount(10) : 10 .
- exit : RunTime Mode Normal Mode .

× PC , Core, Task, Thread 가 .

From:
<http://comizoa.co.kr/info/> - -

Permanent link:
http://comizoa.co.kr/info/doku.php?id=application:comiide:tool:shell:shell_runtimemode&rev=1559007523

Last update: **2024/07/08 18:23**