


..... 1

Read / Write 1

ESC Read / Write

x EtherCAT Slave EEPROM / CoeSDO / Register read, write

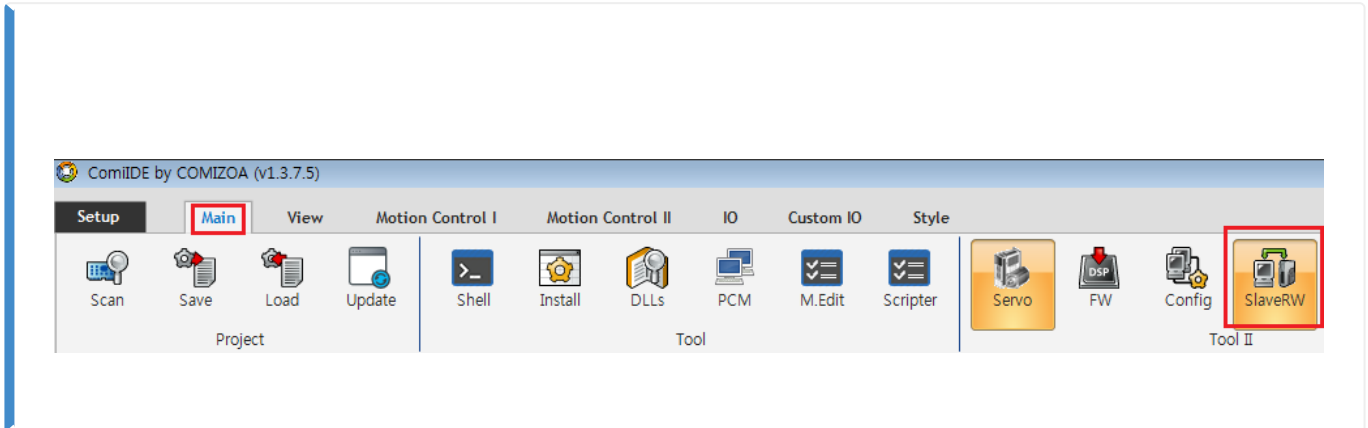

- ComiIDE Main - Tool II Slaves SlaveRW

Read / Write

 A screenshot of the 'Slave RW' dialog box. The 'Info' tab is selected, with 'EEPROM', 'CoE SDO', and 'Register' sub-tabs. The 'Register' sub-tab is active. The left pane shows a tree view of EtherCAT slaves, with '03 : [0219] ETS-DI32N-M' selected and highlighted by a red box labeled '1'. The right pane shows fields for 'Register', 'Size', and 'Value', with a red box labeled '3' around them. At the bottom, there are 'Read' and 'Write' buttons, with a red box labeled '4' around the 'Read' button. The 'Update' button in the top right is labeled '2'.

- List Slave
- EEPROM / Coe SDO / Register
- Read Value Read
- Write Value Write

comizoa, , ide, ethercat, , esc, read, write, eeprom, register, sdo

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

<http://comizoa.co.kr/info/doku.php?id=application:comiide:tool:slaverw:slaverw>

Last update: **2024/07/08 18:23**