


		1
1. Configurator	Download Dictionary	1
2. SDO	Torque Limit	1

× (Torque Limit)


1. Configurator Download Dictionary

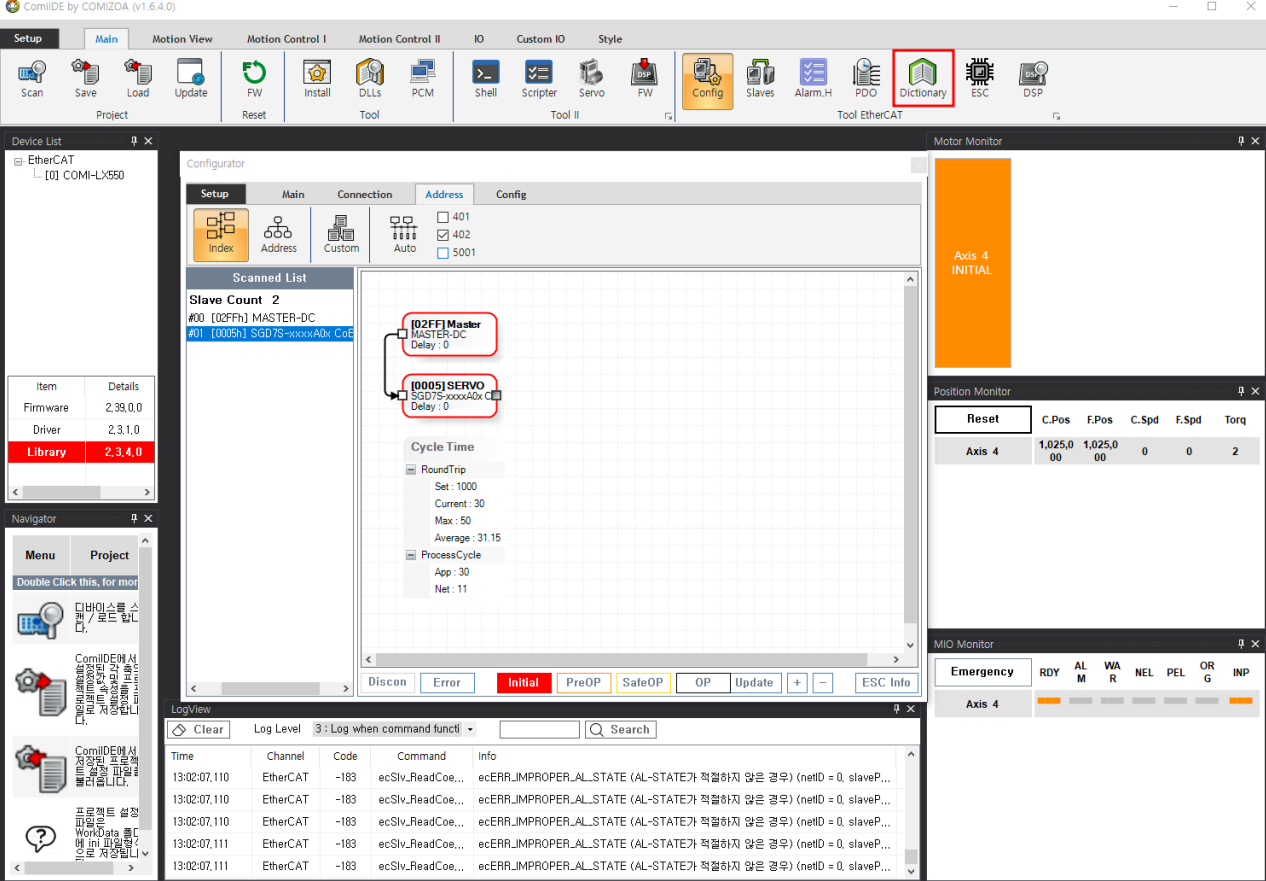


The screenshot shows the ComiIDE v1.6.4.0 software interface. The 'Configurator' window is active, displaying a 'Scanned List' with two devices: 'Slave Count 2' and '000 [02FFh] MASTER-DC'. The 'Config' tab is selected, showing a diagram of a master-slave connection. The 'LogView' window at the bottom shows a log of EtherCAT commands and responses, including 'ecSlv_ReadCoe...' and 'ecERR_IMPROPER_AL_STATE'. The 'Dictionary' button in the top toolbar is highlighted with a red box.

• Config→ Download Main Dictionary


2. SDO Torque Limit

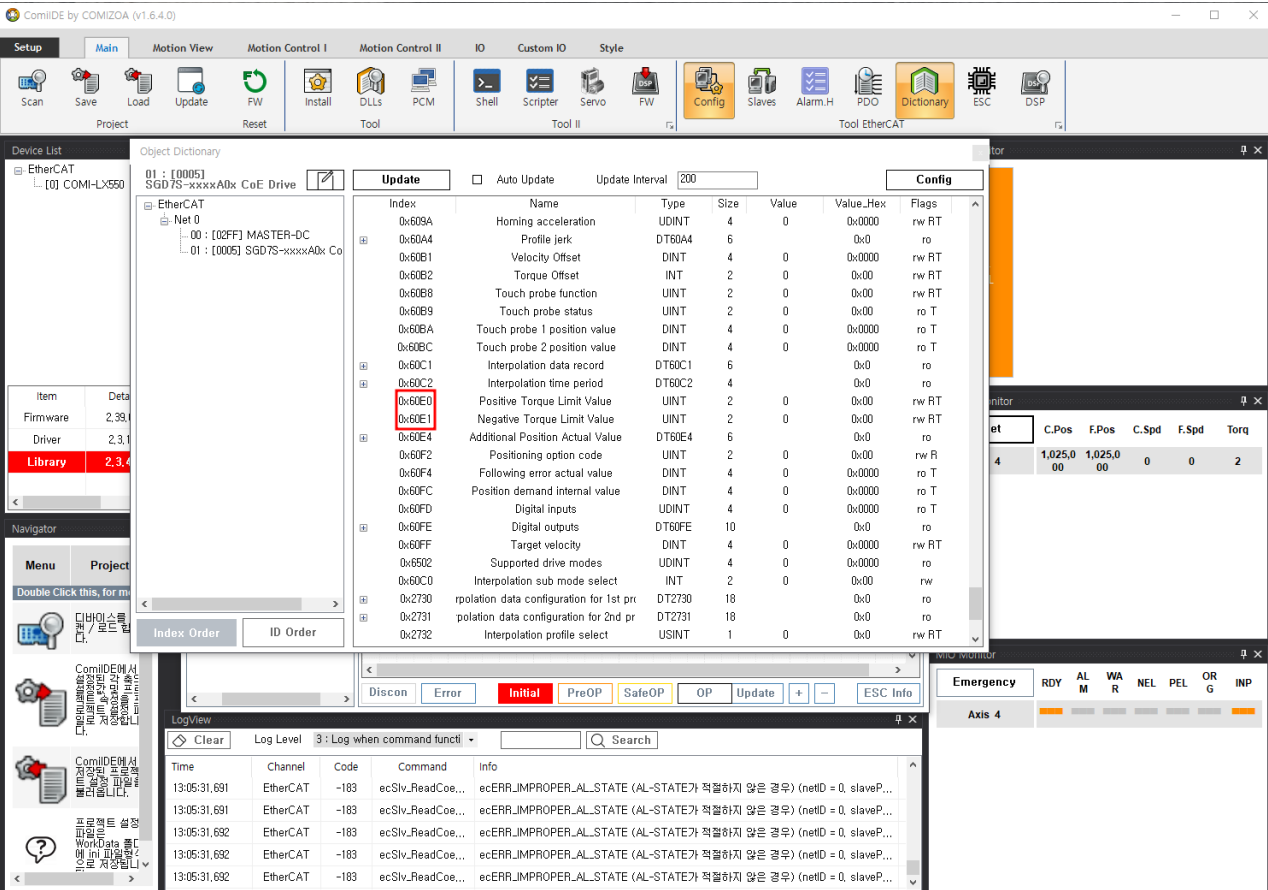

- SDO Torque Limit

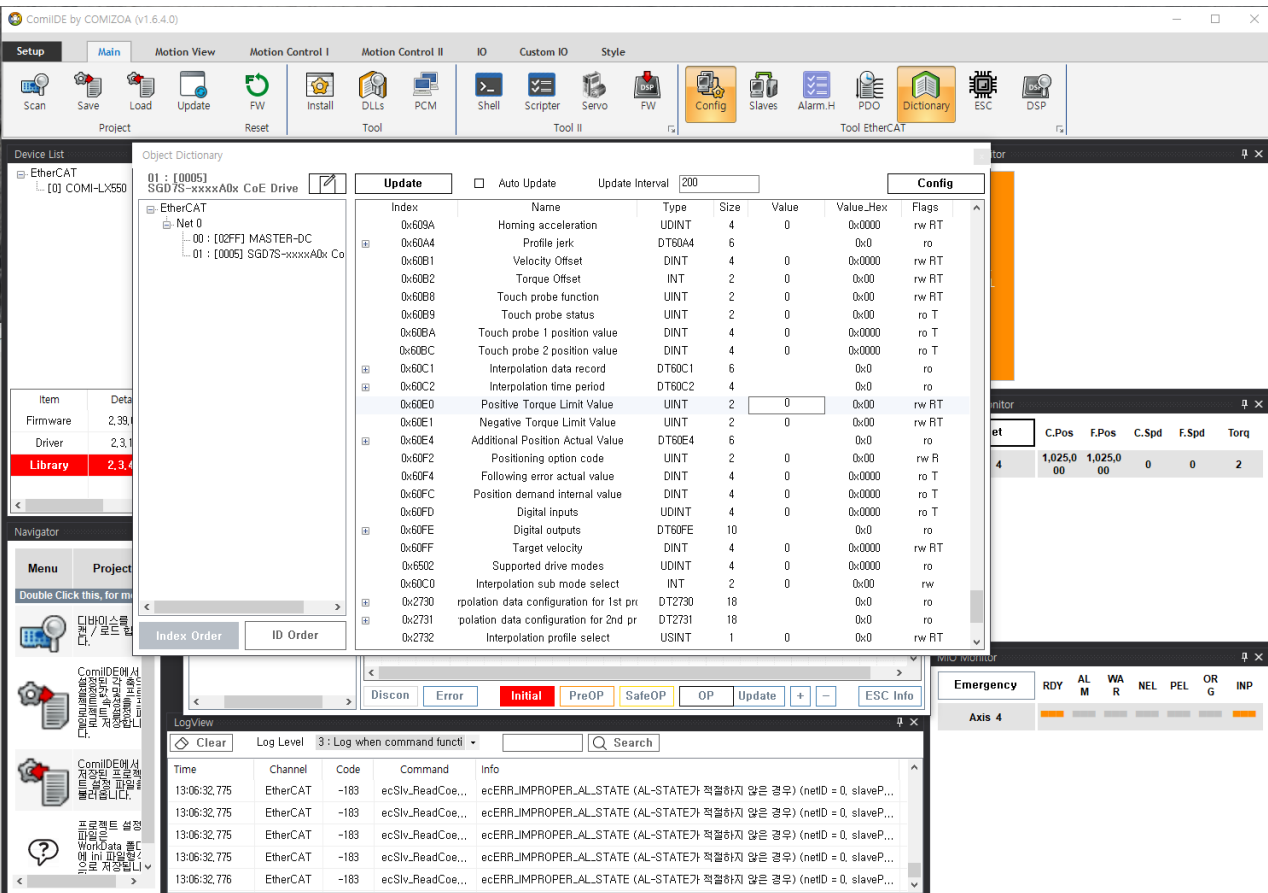

1. Value .
2. Value enter.

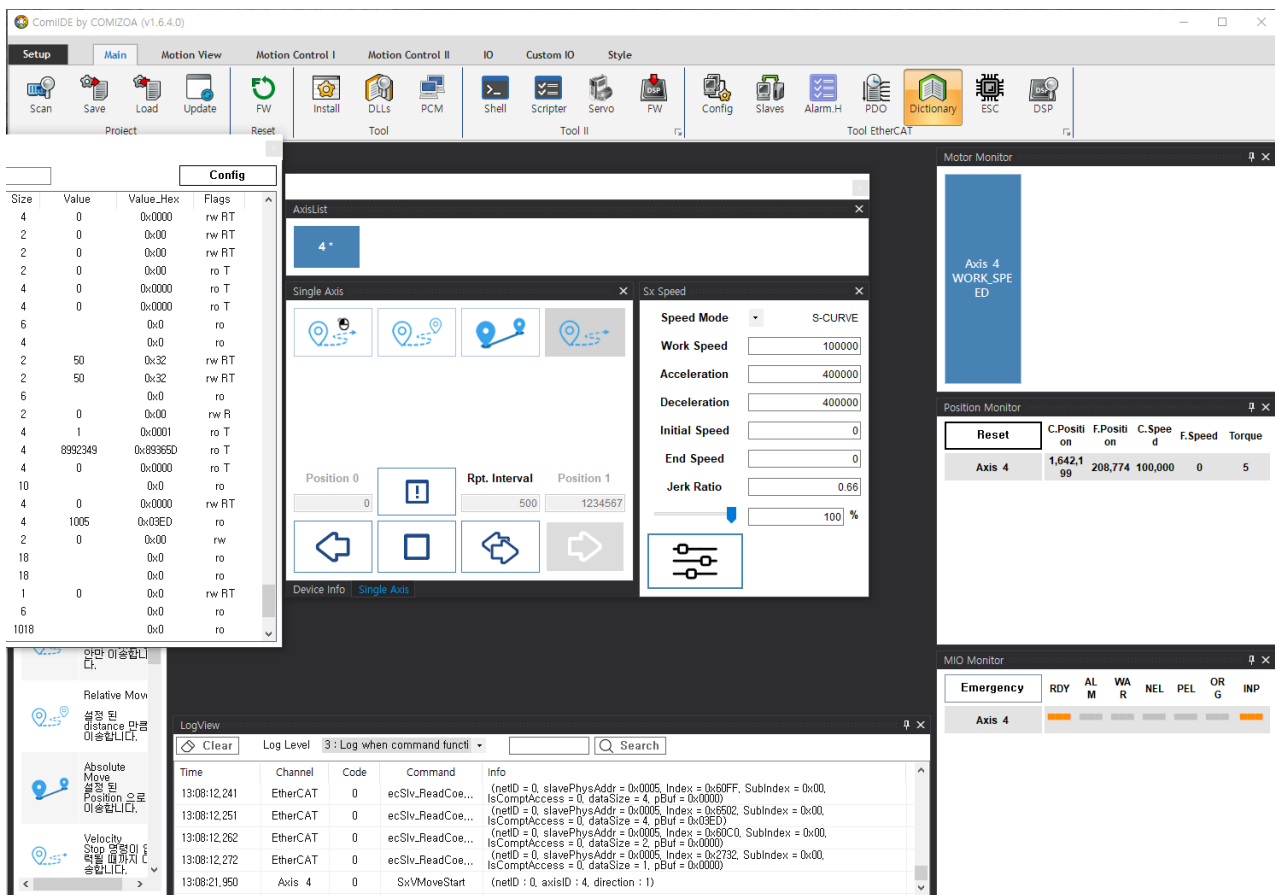

* 가 Limit

* Torque Limit . (Ex: Torque Limit = Maximum Current)

From: <http://comizoa.co.kr/info/> - -

Permanent link:
http://comizoa.co.kr/info/doku.php?id=faq:motion:ethercat:07_torque_limit_setup&rev=1659500723

Last update: **2024/07/08 18:22**