

ecmSxCfg_SetUnitDist	1
Synopsis	1
Description	1
Parameter	1
Return Value	1

ecmSxCfg_SetUnitDist

Synopsis

```
bool ecmSxCfg_SetUnitDist(  
    int netID,  
    int axisID,  
    double unitDistance,  
    ref int errorCode)
```

Description

UnitDistance

	Move	.
.		
' 1 '		

Parameter

- **netID** : EtherCAT NetworkID
- axisID : ID .
- errorCode : .

Return Value

- False : .
- True : .

From:
<http://comizoa.co.kr/info/> - -

Permanent link:
http://comizoa.co.kr/info/doku.php?id=platform:ethercat:100_api:10_desc:100_ecmsx:80_ecmsxcfg_setunitdist&rev=1623118070

Last update: **2024/07/08 18:22**