
Topology View	 1
	 1
	_
Topology View	 4


2025/08/27 03:12 1/5 Topology View

Topology View

× Configurator Topology View

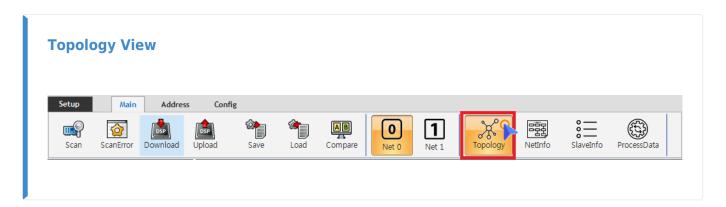

Topology

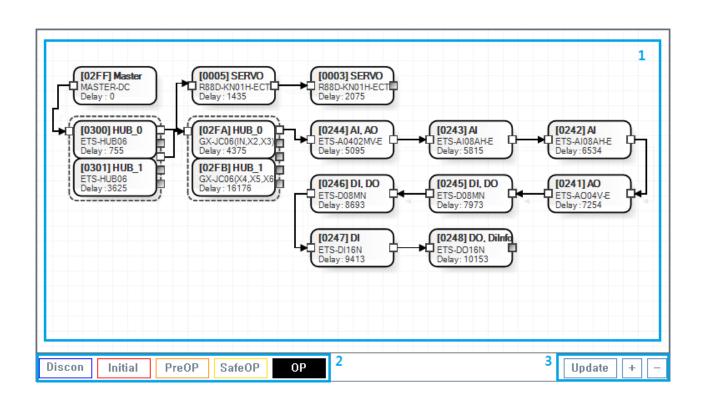

- 1. MainView : Table Line Topology
 - Slave
 - Slave ESC Memory Read / Write / Update
- 2. Al Status Control Panel
 - Slave Al Statue

• 3. Display Control Panel

MainView ,

1. Main View

• Table ESC

• Table 가

- Physical Address (Hexa)
 - ∘ SlaveType (Servo / DI / DO)
 - ∘ DC Delay
 - Port
 - Al Status




Physical Address : 0x0003

SlaveType : ServoDC Delay : 2075ns


○ Port : 2 가 Port 1 port(Inport) Open

• AlStatus : **OP**

• ESC가 , E-BUS

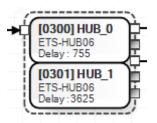


• Table , 가

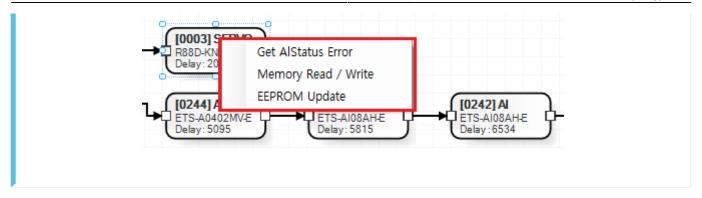

- Get AlStatus Error
 - o Al Status가

, Error Code

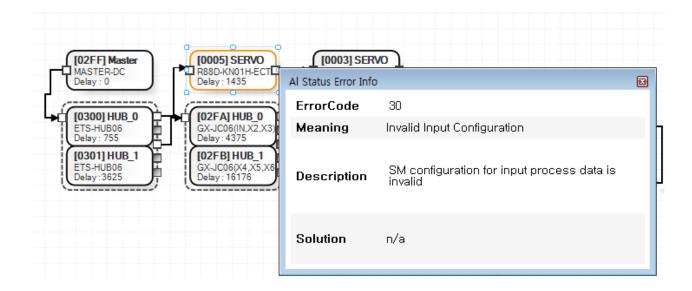


- Memory Read / Write
 - EEPROM, Coe SDO, Register

Read / Write

- SlaveR/W
- EEPROM Update
 - EEPROM ConfigData

• SlaveR/W

Update

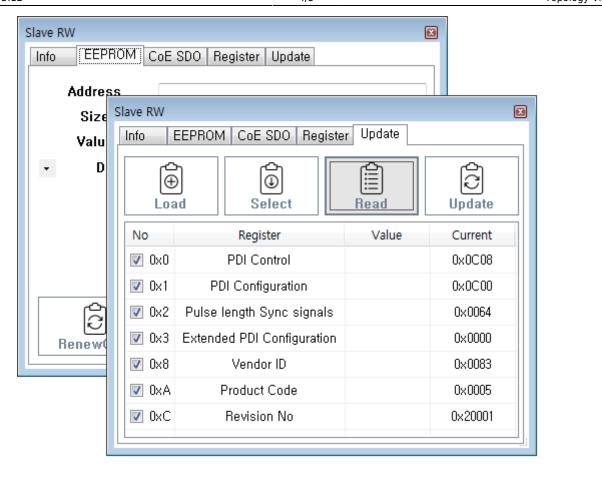

× Warning!

EEPROM_READ_FAILED ScanError 가 , Slave Topology가 .

Topology View

Slave Al Status

• Slave Table

• Disconnect : Slave Al-Status 가 Disconnect

• Initial : Slave Al Status Initial

Slave

• PreOP: Slave Al Status PreOP

Slave

• SafeOP : Slave Al Status SafeOP

Slave

• OP: Slave Al Status OP

Slave

• Al Status가 Slave가 , **Al Status**

From:

http://comizoa.co.kr/info/ - -

 $\label{link:permanent link:http://comizoa.co.kr/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:10_topologyview\&rev=1586239592$

Last update: 2024/07/08 18:22