


Slave Info	1
.....	1
.....	1
Address	2
Info	3
FMMU / SM	4

Slave Info

× Configurator Slave Information Tab
Address, SyncMode, DeviceType

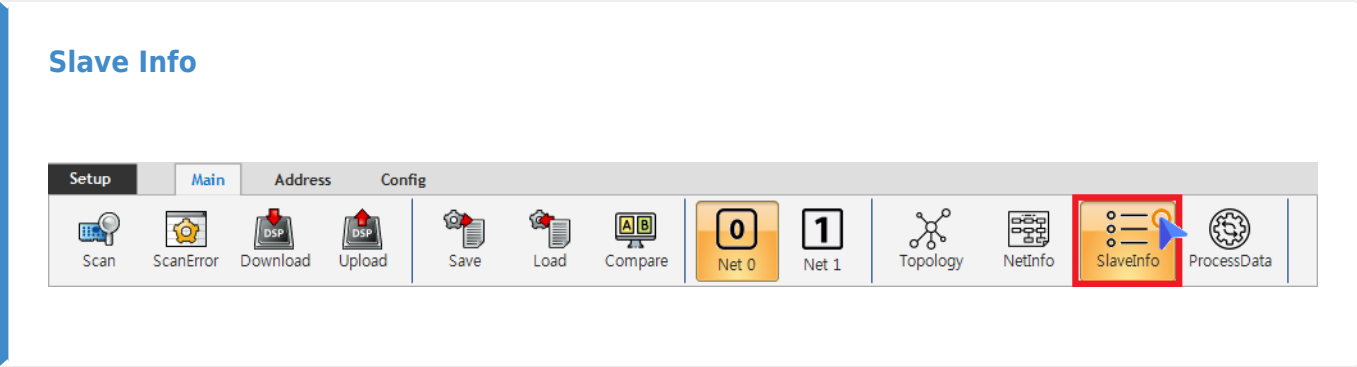

- SlaveInfo

- ESI Slave
- Address
- SyncMode



Property FMMU / SM



Product	ETS-A0402MV-E	ProductCode	0x5032D406
Vendor	COMIZOA	VendorID	0xAAAAAAAA
Group	ETS	RevisionNo	0x16102400

Address

AddressMode	A	ALIAS
Alias		580
AliasILMode	B	IdentificationADO
AutoAddress		-6
PhysAddr_Hex	C	0244

Info

PhysicsType		VV
SyncMode	D	FreeRUN

Support

IsAoE		False
IsCoE		True
IsFoE		True
IsMbx		True

Type

DeviceType_401	E	AI, A0
ProfileNo		401
SubProfileNo		12

AddressMode

☐ Apply All

1 - Info

- Slave Type .

2 - Property

- Slave .
- (default) ESI .
- 가 .

3 - Apply All

- , Type Slave .
- VendorID ProductCode가 Type .

Address

AddressMode

- ALIAS : Master가 Slave Address
◦ Slave
◦ 가 OP Mode 가
- CSA : ALIAS Slave

AliasILMode

- IdentificationADO : Slave ESC Memory
- IdentificationReg134 : Slave
◦ MicroController ID Switch가

PhysAddr_Hex

- 16 Address
- 402 Profile(Driver) IO **BaseAddress**

× Address가

Download

Slave

Info

SyncMode

- xml xml mode
- xml 가 , , FreeRUN

DeviceType_401

- DeviceType 401

Property

FMMU / SM



Product

Vendor

Group

ETS-A0402MV-E
COMIZOA
ETS

ProductCode

VendorID

RevisionNo

0x5032D406
0xAAAAAAAA
0x16102400

Address

AddressMode

Alias

AliasILMode

AutoAddress

PhysAddr_Hex

ALIAS

580

IdentificationADO

-6

0244

Info

PhysicsType

SyncMode

YY

FreeRUN

Support

IsAoE

IsCoE

IsFoE

IsMbx

False

True

True

True

Type

DeviceType_401

ProfileNo

SubProfileNo

AI, AO

☐ NONE

☐ DI

☐ DO

☒ AI

☒ AO

☐ DiInfo

DeviceType_401

☐ Apply All

• DeviceType ,

• “DI Info” Type , DI

◦ DO DeviceID PDO

FMMU / SM

Property FMMU / SM

FMMU

L Start	Length	L EndBit	P Start	Type	Activate	SM	
4	4	7	0x1100	OUT	1	2	
8	16	7	0x1180	IN	1	3	

SM

Start	Length	ActByte	Buffer	Access	IntToECAT	IntToPDI	WDTrigger	Enable	
0x1000	128	0001	1	1	0	0	1	0	
0x1080	128	0001	1	0	0	0	1	0	
0x1100	4	0001	0	1	0	0	1	1	
0x1180	16	0001	0	0	0	0	1	1	

FMMU

- Slave FMMU

SM

- Slave SyncManager

From:
<http://comizoa.co.kr/info/> - -

Permanent link:
http://comizoa.co.kr/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:30_slaveinfo&rev=1586784145

Last update: 2024/07/08 18:22