

Addressing	1
Index	1
Address	2
Custom	2
Auto	4

Addressing

x Slave Mapping

Addressing

SetupMainAddressConfig

IndexAddressCustomAuto

401

☒ 402

☐ 5001

- Index : Mapping
- Address : Mapping
- Custom : User Define Mapping
- Auto : Device Type

Index

Configurator

SetupMainAddressConfig

IndexAddressCustomAuto

401

☒ 402

☐ 5001

Scanned List

Slave Count 15

ECS #00 [02FFh] MASTER-DC

#01 [0300h] ETS-HUB06

#02 [0007h] R88D-KN01H-ECT

#03 [0002h] R88D-KN01H-ECT

#04 [0301h] ETS-HUB06

#05 [02FAh] GX-JC06(IN,X2,X3) Ma

ETS #06 [0244h] ETS-A0402MV-E

ETS #07 [0243h] ETS-AI08AH-E

ETS #08 [0242h] ETS-AI08AH-E

ETS #09 [0241h] ETS-AO04V-E

ETS #10 [0246h] ETS-D08MN

ETS #11 [0245h] ETS-D08MN

ETS #12 [0247h] ETS-DI16N

ETS #13 [0248h] ETS-DO16N

#14 [02FBh] GX-JC06(X4,X5,X6) Su


InfoLogic Memory Section - OutputLogic Memory - InputDI/O Channel MapAI/O Channel Map

Start Channel	Channel Count	Start L-Address	Start L-Bit	Device	No	Alias
Digital Input Channel Map						
0	8	0	0	ETS-D08MN	10	0246
8	8	2	0	ETS-D08MN	11	0245
16	16	4	0	ETS-DI16N	12	0247
Digital Output Channel Map						
0	8	0	0	ETS-D08MN	10	0246
8	8	1	0	ETS-D08MN	11	0245
16	16	2	0	ETS-DO16N	13	0248

- Index 가
- IO ,

- 10 ETS-D08MN (0x246) 0 ~ 7 Global Channel
- 11 ETS-D08MN (0x245) 8 ~ 15 Global Channel

Address

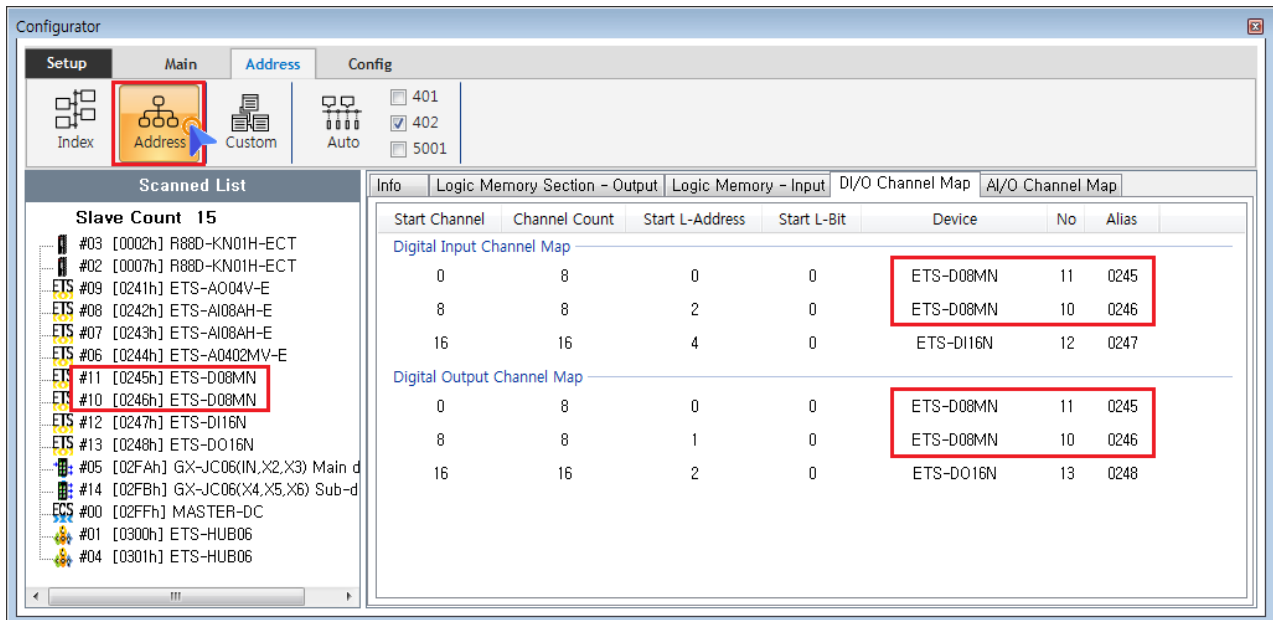

• Address

가

• IO


- 0x245 가 ETS-D08MN 0 ~ 7 Global Channel
- 0x246 가 ETS-D08MN 8 ~ 15 Global Channel

Custom




• Custom


User Defined Map

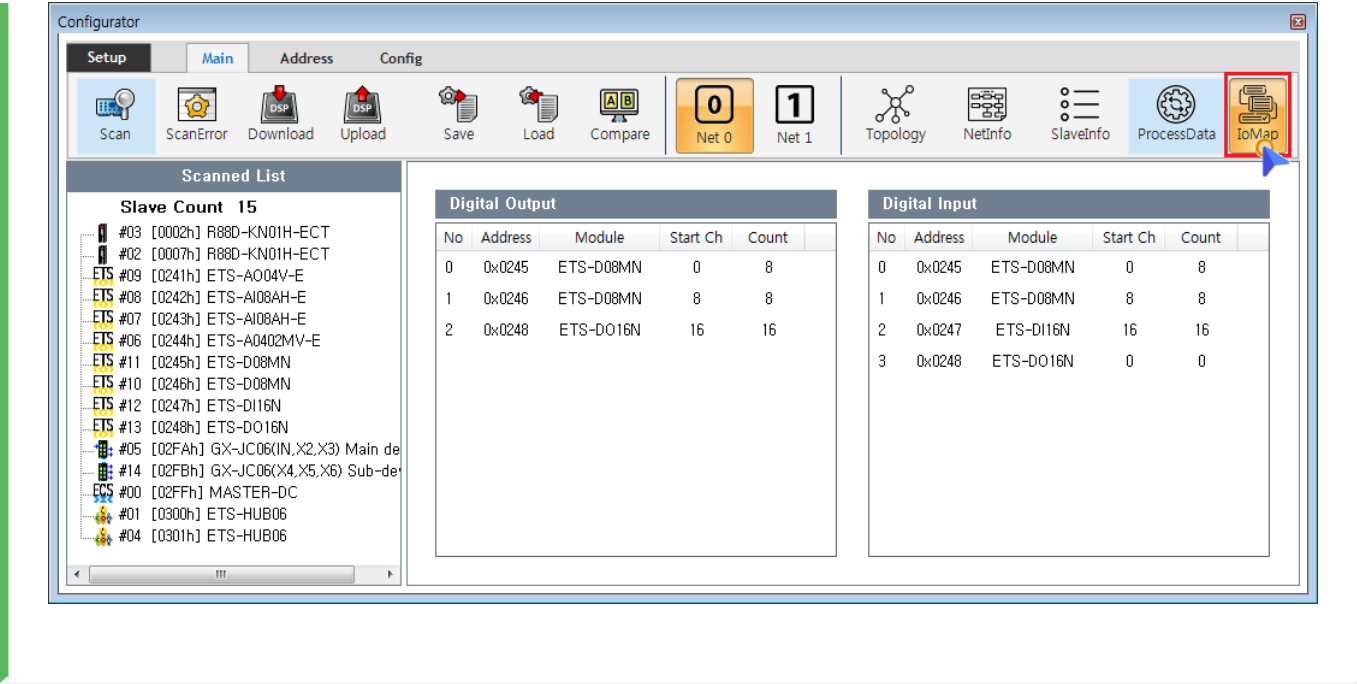


- Custom Main IoMap

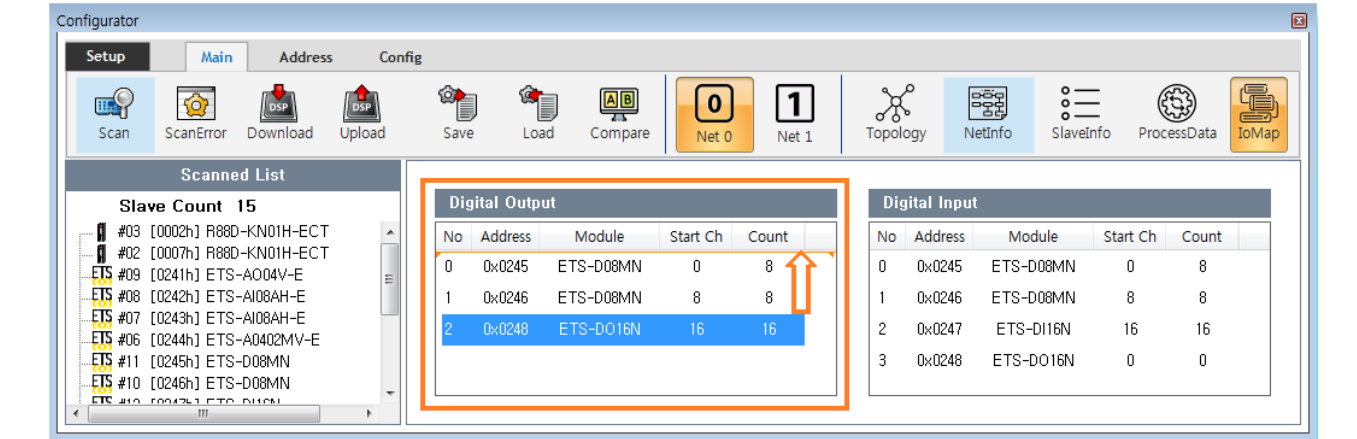

- Item Drag Map

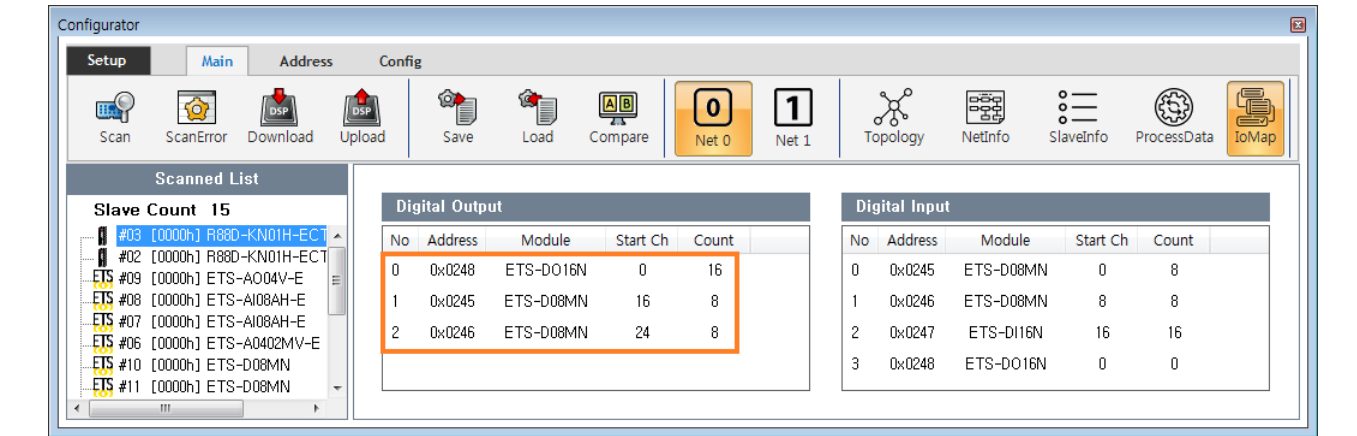


- Drop Map Channel

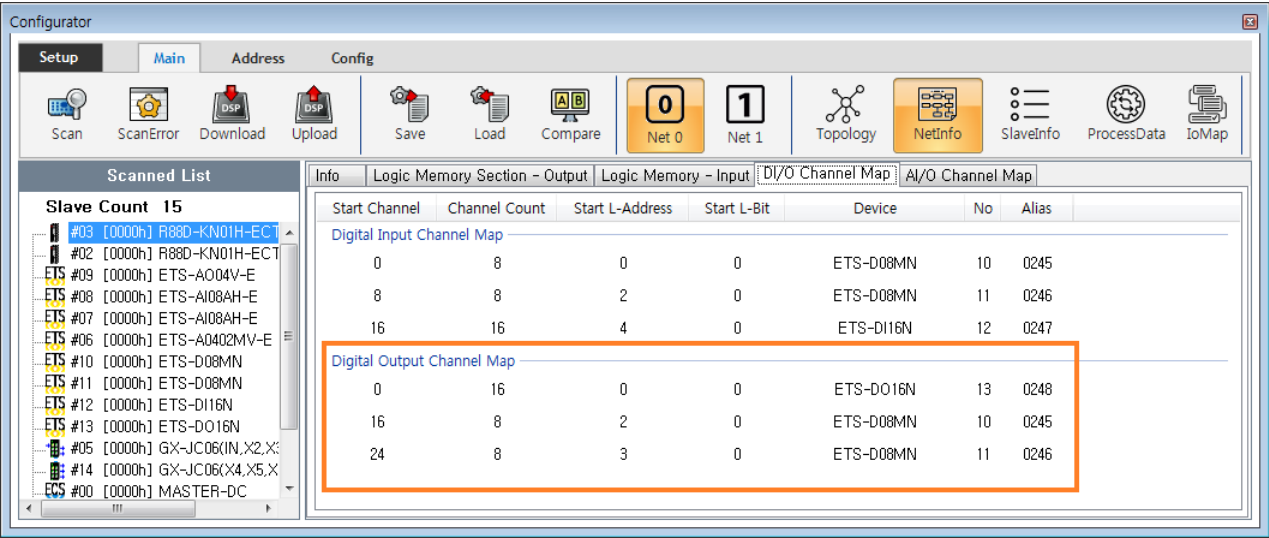

- Channel Map

Auto

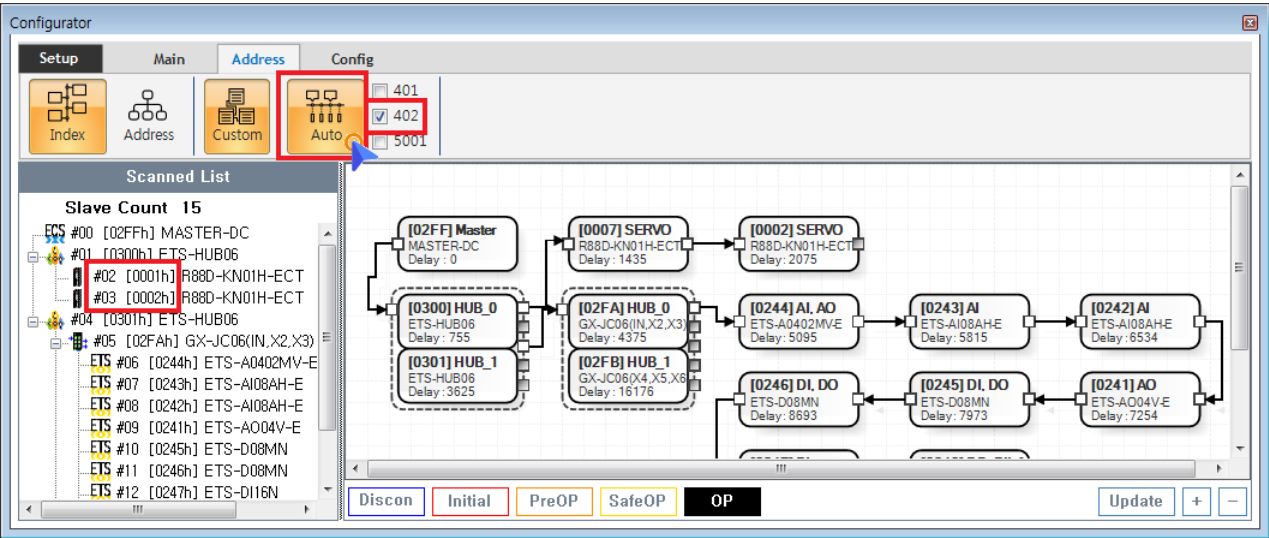

- Check ProfileType¹⁾
 - 401 Profile Driver Address가

- 1 .
- DeviceID Switch .
- **Station Alias Selection** .

1)
401 MocroController가 IO, 402 Driver, 5001

From:
<http://comizoa.co.kr/info/> - -

Permanent link:
http://comizoa.co.kr/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:50_addressing&rev=1586761188

Last update: **2024/07/08 18:22**