

Reset 1

Reset

× Configuration



The screenshot shows a web interface with a navigation bar containing four tabs: 'Setup', 'Main', 'Address', and 'Config'. The 'Config' tab is active. Below the tabs are four icons: 'DC.Delay' (hourglass), 'MisConnect' (circuit breaker), 'M.Change' (refresh), and 'Reset' (circular arrow with a play button). The 'Reset' icon is highlighted with a red rectangular box. Below the screenshot, there is a list of items:

- **Config** **Reset**
- Configuration

× Device Boot Failed

Reset

,

Reset

PC

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:90_reset

Last update: **2024/07/08 18:23**