

EEPROM Read / Write Failed 1
AL-Status Error 1

EEPROM Read / Write Failed

× Scan EEPROM Read Failed 가

AL-Status Error

- **SCAN Slave AIStatus가 Initial**
 - SCAN , Master Slave AIStatus Initial
 - Slave AIStatus가
 - AIStatus Error가 Slave¹⁾ AIStatus가
- Slave AIStatus가 Initial , **Master Initial** ,
 - **Slave** Master OP , OP
 - AIStatus Error가
- **Master AIStatus**

¹⁾
 Disconnect Init - PreOP

From:
<http://comizoa.co.kr/info/> - -

Permanent link:
http://comizoa.co.kr/info/doku.php?id=platform:ethercat:1_setup:10_config:ts:eeeprom_read_failed

Last update: **2024/07/08 18:23**