Daemon	. 1
Daemon	1
	. 1
Daemon	2
Slave Info.	3
Network Config	4

× Daemon



.

ComiSAEcatDaemon.exe



• Tray **Daemon**

•

•

.

• ID Password

'administrator'

Daemon

			1					
		ves Info.	Network Co	onfig.	DV Error	Outb	DO 1	InDO
			Priy.	A AlStatus	KX EITOI			INPDO
Name	Value	^ [20	20-09-01 14:1	3:54:031] [192.]	[68.1.49] All Server So	ockets Started.		
Heartbeat Process Time	909 usec	- <u></u> [20	20-09-01 14:1	3:54:0051 Netw	ork Adapter 01/192.18	68.1.49) is is waiting	a for Standalone Ethe	rCAT Maste
Corell Cycle Process Time	40 usec	[20	20-09-01 14:1	3:55:387][192.	168.1.101:34835j Masi	ter Device Connect	ed	
Core1 Cycle Process Time	9 usec							
MainTaskProcessTime	19 usec	_						
Task_IPC_MastCmdAns	1468 usec							
Task_M2ASyncCmdRcv	22 usec	_						
Ctrl Msg Process Time D/M	0/9usec	-						
IU Msg Process Time D/M	8 / 180 user	× .					ClearList	Auto S
		>					Ciear List	Auto S
							ene	0.00.01.1.4.9

가

, Device List Master

•

2025/08/22 04:51	3/5	Daemon
🔀 Comizoa Standalone EtherCAT Master Daemon		×
RUNTIME Scan Devices	Log Config. ID/PW Update	EXIT

- RUNTIME : 'Simulation Mode'
 - \circ , 'Simulation Mode' 'RunTime Mode'
- Scan Device : StandAlone EtherCAT Master
- Log Config : Library Logging · ComilDE DLL Logger 가 .

Log Config	uration		×
	Log Type Log Level	ecDLOG_TYPE_COMITOOL	Appiy

.

- **IP/PW Update** : ID Password
 - ID Password , Login

LOGIN		>	<
B	USER NAME	a LOGIN *	

• EXIT : Daemon



.

ID	NAME	Phy. A	AlStatus	RX Error	OutPDO	InPDO
1	0x5132aa00	0x200	0x8	0x0		
2	0x5032da11	0x204	0x8	0x0	00	00 04

- Master
- Configuration Slave

Network Config.

DeviceID / DeviceIP

onnect	ed Device List				9	et Device Adrress
Index	Device Id	IP Address	Ctrl. Msg. Port	IO Msg. In Port	IO Msg. Out Port	IO Msg. Frame
1	0	192.168.1.101	34835	35040	35041	286
5			— Daemon Network	Configuration		>
Local Libran	IP Address y Server Port	192 . 168 . 55000	1 . 49	Start Library Serv	ver Lib	Stop orary Server
Maste IO Ms	r Server Port g. In Port	5000 35040		Start Master Serv	ver Ma	Stop ster Server
IO Ms	g. Out Port	35041		Master Sen	/er Ma	ister Server

• Network Config. Set Device Address

Master Device Network Configuration	×
Current(From) Device Config.	
Master Deive IP 192.168.1.101	
New(To) Device Config.	
Device ID(0~7) 0 Master Deive IP	
Read Device Info Write Device Info	
The New Deivce Cofiguation will be applied after POR(Power On Reset) of the device.	

New(To) Device Config. 'Device ID' 'Master Device IP' , Write Device IP' , Write Device Info .
○ Device ID Device IP가 , Master .

Description

- Start Library Server :
- Stop Library Server :
- Start Master Server :
- Stop Library Server :

From: http://comizoa.co.kr/info/ - -

Permanent link: http://comizoa.co.kr/info/doku.php?id=platform:ethercat:1_setup:20_ip:20_daemon&rev=1598943440

Last update: 2024/07/08 18:22