


```
namespace ... {
```

```
public class ...
{
    public void Init()
    {
        // Master Device
        InitMasterDevice();

        // Config Scan . ( )
        CheckChannel();

        // 가
        AxisServoOn();

        //
        AxisHomeReturn();
    }

    private void InitMasterDevice()
    {
        //
        DeviceLoad();

        // 가
        CompareSlaveCount();
        // SW Version(FW, WDM, SDK)
        GetVersionCompResult();
        // Input / Output
        CheckReveseConnection();
        // Network alStatus OP
        SetAlStateToOP();
    }

    private void DeviceLoad() {}
    private void CompareSlaveCount() {}
    private void GetVersionCompResult() {}
    private void CheckReveseConnection() {}
    private void SetAlStateToOP() {}
    private void CheckChannel() {}
    private void AxisServoOn() {}
    private void AxisHomeReturn() {}
}
}
```

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/doku.php?id=platform:ethercat:70_users_guide:00_cookbook:20_systeminit:10_summary&rev=1620968600

Last update: **2024/07/08 18:22**