

Case 1 1
Cause 1
Solution 1

× Torque가 0

Case 1

Cause

- InPDO Data Torque
- 1)

Solution

- InPDO Data Torque Configuration
 - Torque PDO Map

The screenshot shows the 'Configurator' software interface with the 'ProcessData' tab selected. The interface includes a toolbar with 'Scan', 'Download', 'Upload', 'Save', 'Load', and 'Close' buttons. Below the toolbar are several panels:

- Topology:** A tree view showing device addresses and names, including [0200h] MASTER-DC and several [0005h] MADHT1505BA1 devices.
- Slave Info:** A table for SyncManager with columns SM, Size, and Type. Row 3 (SM 3, Size 25, Type Inputs) is highlighted with a red box.
- PDO List:** A table listing PDO mappings. Row 3 (Index 0x1A01, Size 25, Name Transmit PDO mapping 2, SM 3) is highlighted with a red box.
- PDO Assignment:** A table with checkboxes for PDO indices 0x1A00, 0x1A01, 0x1A02, and 0x1A03. The checkbox for 0x1A01 is checked and highlighted with a red box.
- PDO Content (0x1A00):** A table listing PDO content. Row 10 (Index 0x6077:00, Size 2, Name Torque actual value, Type INT) is highlighted with a red box.

At the bottom, there are 'Index' and 'Addr' buttons, and a checkbox for 'Apply AutoAddress To Servo'.

- Config **Configuration Guide**

1)

InPDO Data

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/doku.php?id=platform:ethercat:70_users_guide:20_ts:torque_monitor_failed&rev=1560402441

Last update: **2024/07/08 18:22**