

Case 1 1
Cause 1
Solution 1

× Torque가 0

Case 1

Cause

- InPDO Data Torque
- 1)

Solution

- InPDO Data Torque Configuration
◦ Torque PDO Map

The screenshot shows the 'Configurator' software interface with the 'ProcessData' tab selected. The interface is divided into several sections:

- Topology:** A tree view on the left showing the device hierarchy, including a MASTER-DC and several slave devices (MADHT1505BA1).
- Slave Info:** A table showing the configuration for the selected slave. The 'Inputs' row (SM 3, Size 25) is highlighted with a red box.
- PDO List:** A table showing the mapping of PDOs. The 'Transmit PDO mapping 2' row (Index 0x1A01, Size 25, SM 3) is highlighted with a red box.
- PDO Assignment:** A table showing the assignment of PDOs to slave addresses. The '0x1A01' row is checked and highlighted with a red box.
- PDO Content (0x1A00):** A table showing the content of the PDOs. The 'Torque actual value' row (Index 0x6077:00, Size 2, Type INT) is highlighted with a red box.

- Config **Configuration Guide**

1)

InPDO Data

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/doku.php?id=platform:ethercat:70_users_guide:20_ts:torque_monitor_failed&rev=1560402448

Last update: **2024/07/08 18:22**