

Case 1 1
Cause 1
Solution 1

× Torque가 0

Case 1

Cause

- InPDO Data Torque
- 1)

Solution

- InPDO Data Torque Configuration
 - Torque 가 PDO Map

The screenshot shows the 'Configurator' software interface. The 'ProcessData' tab is active. The interface is divided into several sections:

- Topology:** A tree view on the left showing the device hierarchy, including MASTER-DC and several MADHT1505BA1 units.
- Slave Info:** A table showing the configuration for the selected slave. The 'SyncManager' table has the following data:

SM	Size	Type
0	256	MBoxOut
1	256	MBoxIn
2	9	Outputs
3	25	Inputs
- PDO List:** A table showing the mapping of PDOs. The 'Transmit PDO mapping 2' row (Index 0x1A01, Size 25, SM 3) is highlighted.

Index	Size	Name	SM
0x1600	9	Receive PDO mapping 1	2
0x1601	19	Receive PDO mapping 2	
0x1602	15	Receive PDO mapping 3	
0x1603	21	Receive PDO mapping 4	
0x1A00	23	Transmit PDO mapping 1	
0x1A01	25	Transmit PDO mapping 2	3
0x1A02	25	Transmit PDO mapping 3	
- PDO Assignment:** A table showing the assignment of PDOs to slave addresses. The '0x1A01' row is checked.

Index	Size	Name	Type
0x1A00			
0x1A01			
0x1A02			
0x1A03			
- PDO Content (0x1A00):** A table showing the content of the PDOs. The '0x6077:00' row (Torque actual value, INT) is highlighted.

Index	Size	Name	Type
0x603F:00	2	Error code	UINT
0x6041:00	2	Statusword	UINT
0x6061:00	1	Modes of operation display	SINT
0x6064:00	4	Position actual value	DINT
0x606C:00	4	Velocity actual value	DINT
0x6077:00	2	Torque actual value	INT

- Config [Configuration Guide](#)

1)

InPDO Data

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/doku.php?id=platform:ethercat:70_users_guide:20_ts:torque_monitor_failed&rev=1560402458

Last update: **2024/07/08 18:22**