

- EtherCAT 1
- Intro 1
- Setup 1
- Device Install** 2
- Software Install** 2
- Connect Check** 2
- Config** 3
- Test** 3
- Trouble Shooting 3
- Support 3

EtherCAT Type

EtherCAT

Intro

EtherCAT

EtherCAT

- [EtherCAT](#)
- [EtherCAT Type](#)
-

EtherCAT Info

- [Object Dictionary, PDO, SDO](#)
- [ESI File](#)
- [\(Sync mode\)](#)

COMIZOA EtherCAT Hardware Master

- [Comizoa EtherCAT Hardware Master](#)
- [Comizoa EtherCAT Devices](#)
- [Comizoa EtherCAT](#)
- [Comizoa EtherCAT](#)
- [Comizoa EtherCAT](#)
- [Comizoa EtherCAT](#)

Setup

× [EtherCAT Setup](#) [Quick Guide](#) .

Device Install

- Device **DeviceID**
- Device **PCI Slot**
- Hardware 2.10 , **12V**
- PC Device LED
- LED

Software Install

- Setup (**Download**) Setup
- Setup 가
 - **Driver**
 - **Driver가**
 - **Driver**
 - **DLL**
- ComilDE **Device Load**
- ComilDE , **SW Version**
 - ComilDE , **ComiTray** **SW Version**

Connect Check

- Cat.5e STP¹⁾
-

Config

- **Configuration**
- Slave **AI-State**가 **OP**가

Test

- **ComiIDE**
- Motion Test **Motion Test**

Trouble Shooting

Support

1)

Shielded Twisted-Pair CAT 5e

From:
<http://comizoa.co.kr/info/> - -

Permanent link:
<http://comizoa.co.kr/info/doku.php?id=platform:ethercat:start&rev=1560403159>

Last update: **2024/07/08 18:22**