

Intro

Logging

Interval

LogType

1

1

3

4

LogMode


× API

LogMode

.


Intro

- LogMoed API Stop API , 1)
- 'Log' LogMode .
- / .

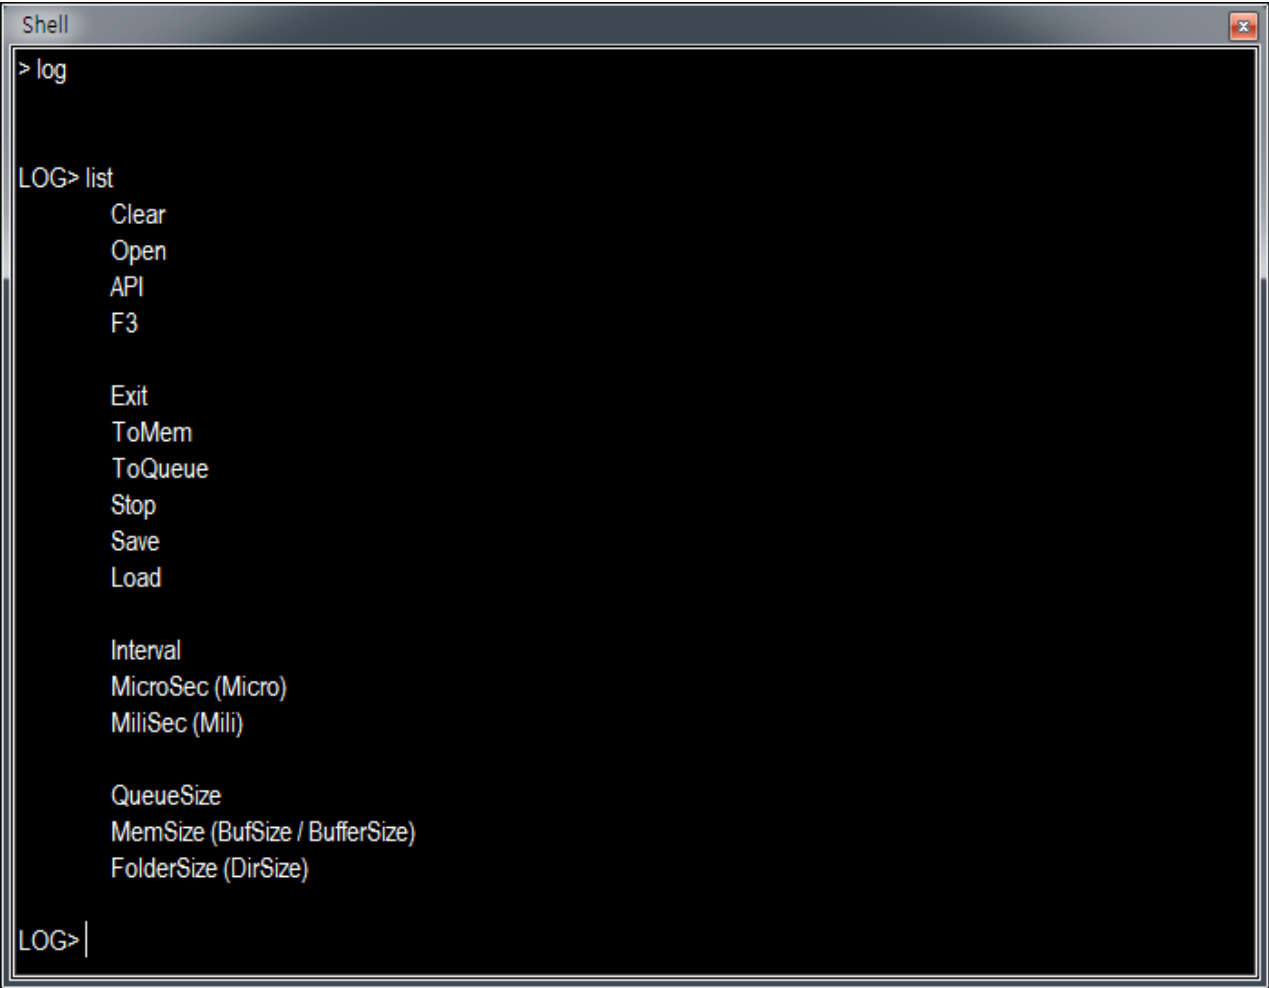

Logging

- API
- ',' API
- out type parameter "null", logging
- parameter "Invalid parameter", logging
"Logging Start"

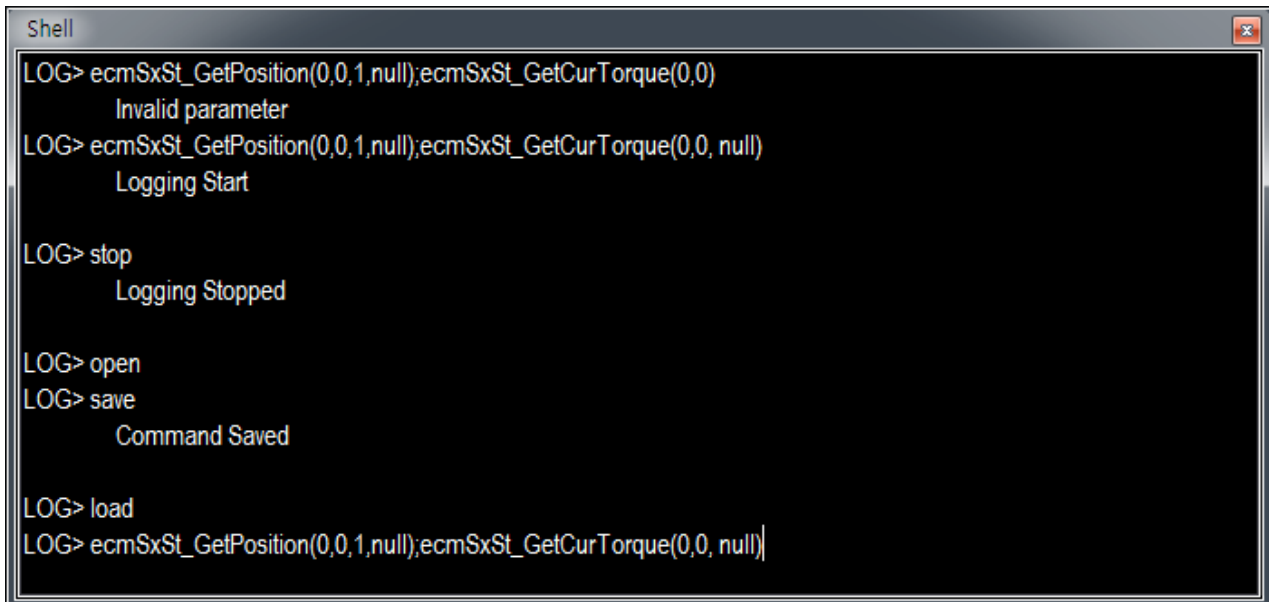

```

Shell
LOG> ecmSxSt_GetPosition(0,0,1,null);ecmSxSt_GetCurTorque(0,0)
      Invalid parameter
LOG> ecmSxSt_GetPosition(0,0,1,null);ecmSxSt_GetCurTorque(0,0, null)
      Logging Start

LOG> stop
      Logging Stopped


LOG> open
LOG> save
      Command Saved

LOG> load
LOG> ecmSxSt_GetPosition(0,0,1,null);ecmSxSt_GetCurTorque(0,0, null)|
  
```

```


LOG> stop
LOG> open
LOG> save
LOG> load
  
```

- stop : logging "Logging Stopped"
- open : logFile
- save :
- load :

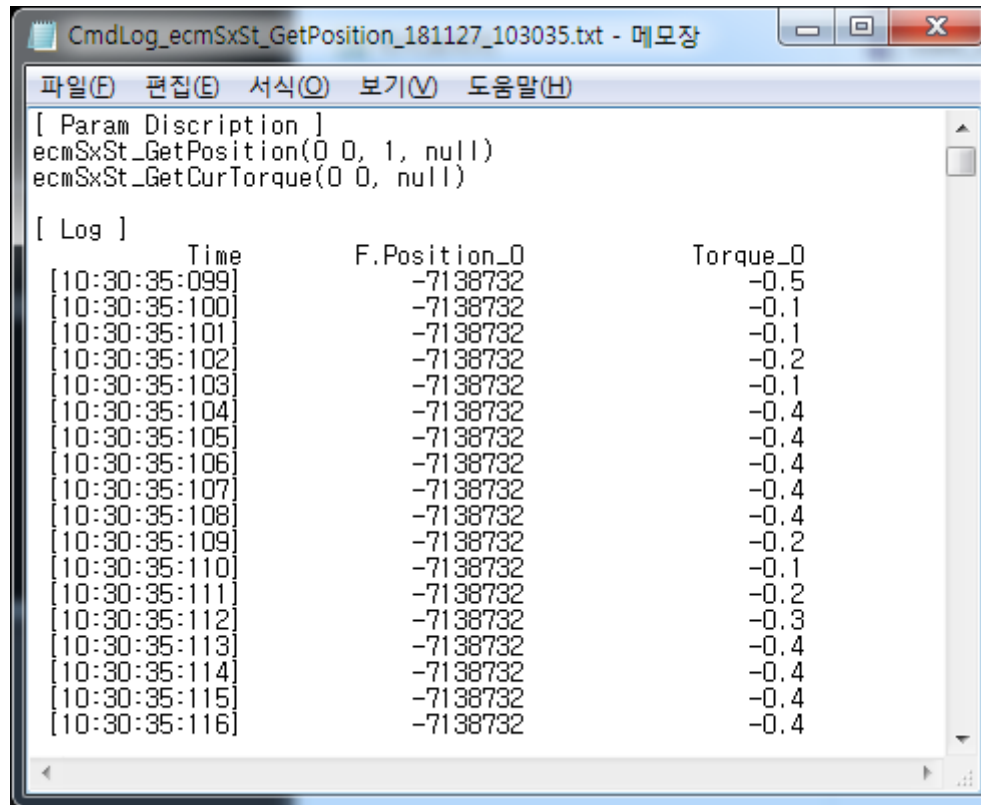

Interval

- Logging

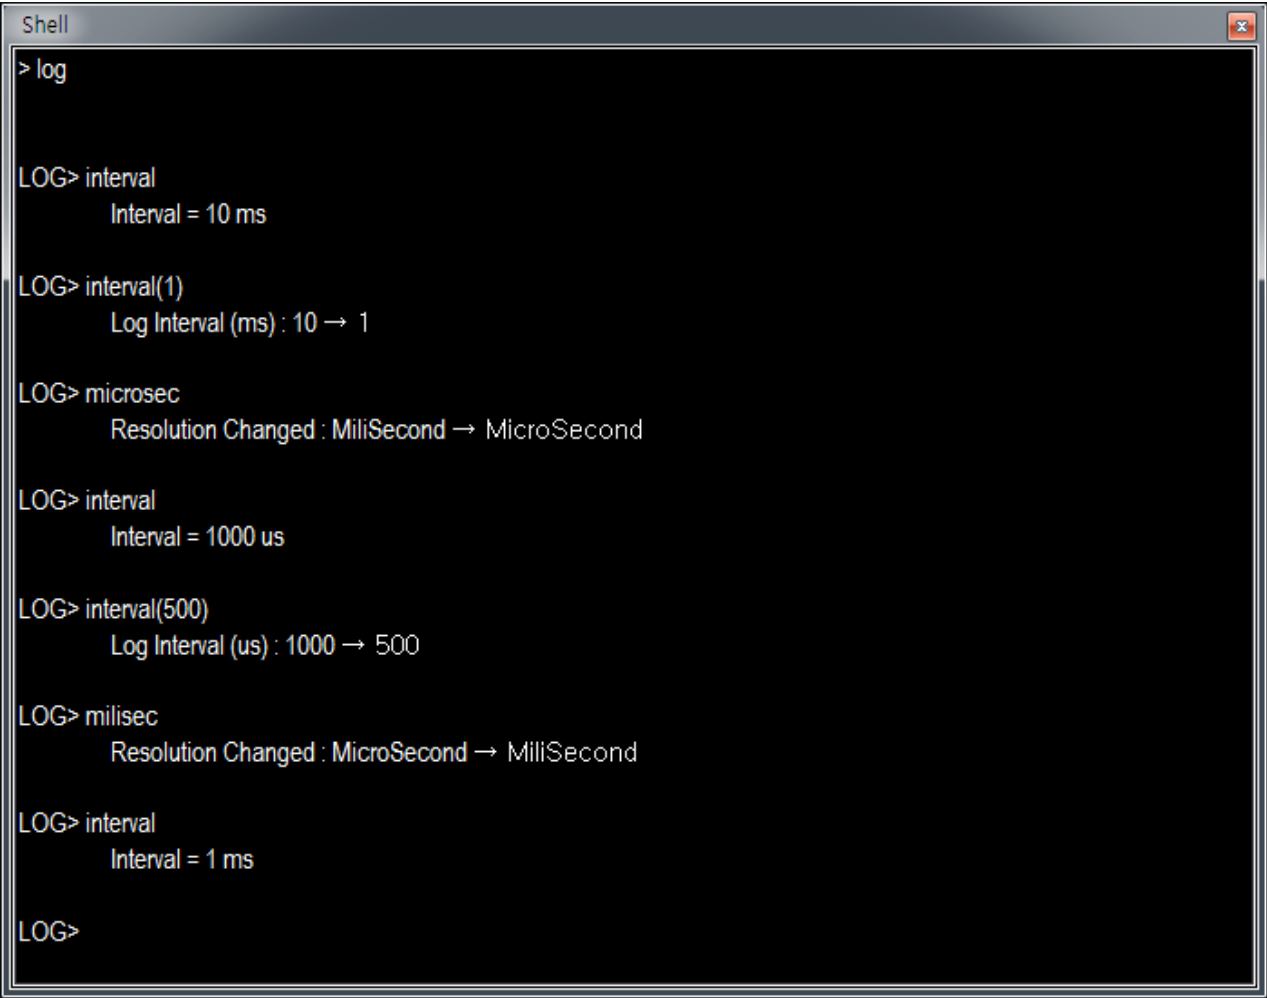


```
LOG> interval
LOG> interval(1)
LOG> microsec
LOG> interval
LOG> interval(500)
LOG> milisec
```

- interval : log 10ms
- interval(1) : log 1ms
- microsec : log us
- intervala : microsec milisec
- interval(500) : microsec microsec 가

× logging pc
 , microsec pc

LogType

- Memory Queue .

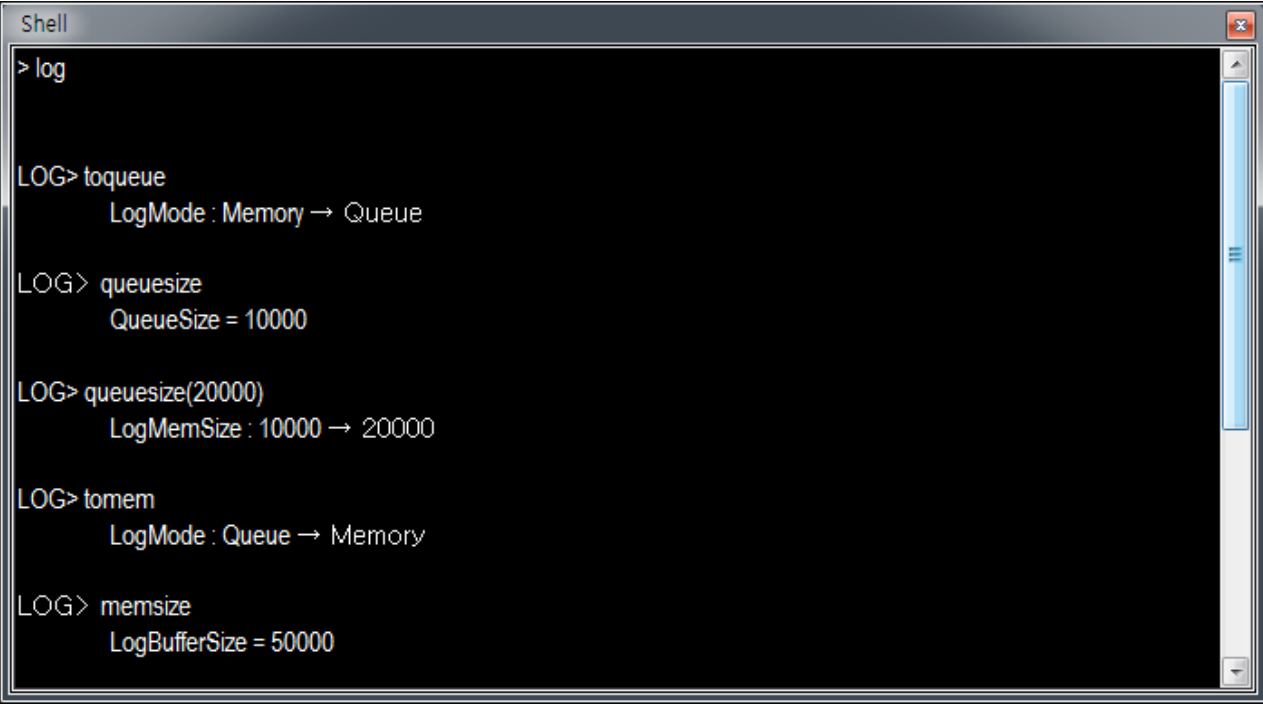

```

Shell
> log

LOG> toqueue
    LogMode : Memory → Queue

LOG> queuesize
    QueueSize = 10000

LOG> queuesize(20000)
    LogMemSize : 10000 → 20000

LOG> tomem
    LogMode : Queue → Memory

LOG> memsize
    LogBufferSize = 50000
  
```

Memory

- MemSize Memory .

- , Stop .

Queue

- QueueSize , stop .

```

LOG> toqueue
LOG> quesize
LOG> quesize(20000)
LOG> tomem
LOG> memsize
LOG> memsize(20000)
  
```

- toqueue : Queue .
- quesize : queueSize . line .
- quesize(20000) : quesize 20000 .
- tomem : Memory . Shell .
- memsize : MemorySize . line .
- memsize(20000) : MemorySize 20000 .

1)

Return out

From:

<http://comizoa.co.kr/info/> - -

Permanent link:

http://comizoa.co.kr/info/doku.php?id=application:comiide:tool:shell:shell_logmode&rev=1543283857

Last update: **2024/07/08 18:23**